

Recently I have had a few of these codes pop after changing a hot roller or accidentally forgetting a plug for the finisher and turning it on. When the machines comes to ready and you can reset the machine and but will still come back.

You can reset the code by doing this...

- Open door
- Go to SP mode
- Turn off machine
- Wait 10 seconds
- Unplug machine
- Wait 10 seconds
- cycle the power switch a few times
- Wait 10 seconds
- Plug the power cord back in
- Power on

This should clear it out, if not you may need a thermistor/thermostat. I have only had one that needed it so far though.

Evidently it disrupts something in the power supply and it needs to be completely drained of power in order to fix it