



ReadMe: How to obtain the Fiery password

To log on to the Fiery server as an administrator or operator, you must obtain the Fiery password.

To obtain the Fiery password

- 1 Make sure that the Fiery server is connected to the printer.
- 2 Print the Fiery Server Configuration page from the display panel on the Fiery server or the printer LCD panel.
- 3 On the Fiery Server Configuration page, look for *ID* in the *BIOS Setup* section.

The Fiery administrator or operator password is the first 14 alphanumeric characters in the ID field.

ID

000045062X63000000000000

- 4 After you log on to the Fiery server, change the Fiery password to prevent unauthorized usage.

Note: Use Configure in WebTools or Fiery Setup Wizard to change the Fiery password.

Notes on the default password

- The Fiery documentation may mention “Fiery.1” as the default password. Do not use this password when you log on to the Fiery server for the first time. Instead, use the password obtained in Step 3.
- If you reinstall the Fiery system software or restore factory default settings, the administrator password will be replaced by “Fiery.1”. Use “Fiery.1” to log on to the Fiery server and change the password.