

@REMOTE INSTRUCTIONS

SP Mode Setup

- 1) 5816-201 – This shows you the @remote status. 0 (not enable), 3 (appliance), 2 (embedded).
- 2) 5816-202 – Enter @remote number.
- 3) 5816-203 – Execute confirmation of number.
- 4) 5816-204 – Confirm the results. 9 means it's in process. 0 means succeeded, anything else is a failure.
- 5) 5816-206 – Execute registration.
- 6) 5816-207 - Confirm the results. 9 means it's in process. 0 means succeeded, anything else is a failure.