

## RICOH MPC6002/8002

Shows mystery open cover message but all covers are closed.

No covers is actually displayed as being open.

Solution:

Fuser Grip D2 was broken, there is a sensor that was not seeing the broken Grip (Part# D1364159) which was out of its home position.

Temporary fix until part is replaced , you can cover the sensor with tape.