

Startup and Initial Setup

1. Make sure that the power cord of the copier is connected to a power outlet and switch on the copier main power.
2. Enter SP mode.
3. Change the setting of SP5193-001 from "0" to "1".
4. Change the setting of SP5895-001 from "0" to "1".
5. Turn the copier main power switch off and wait until the main power indicator is off.
6. Turn the copier main power switch on.

Note

The copier must be turned on before you turn the E-22B on. Make sure that all firmware modules for the copier are updated to the newest versions. If they are not, update them before you turn on the E-22B. (☞ Copier Service Manual)

7. Turn the main power switch on the E-22B back panel to ON.
8. Press and release the soft power push button on the front panel of the E-22B.
9. Allow startup to proceed without interruption, while you watch the diagnostic LEDs on the back panel of the E-22B.
10. When the diagnostic LEDs remain at '00', go to the copier operation panel and press the Home button on the operation panel of the copier and wait for a few minutes until the Fiery icon appears on the Home screen.
11. Touch the Fiery icon. "Please Wait!" will be shown on the copier operation panel for a while.
12. Within about three minutes, the language selection screen is shown. (If this screen is not shown, then press the Home button on the operation panel of the copier and then touch the Fiery icon again.)
13. Select the desired language button, and touch "Continue".
 - English
 - Dutch
 - Spanish
 - Italian