

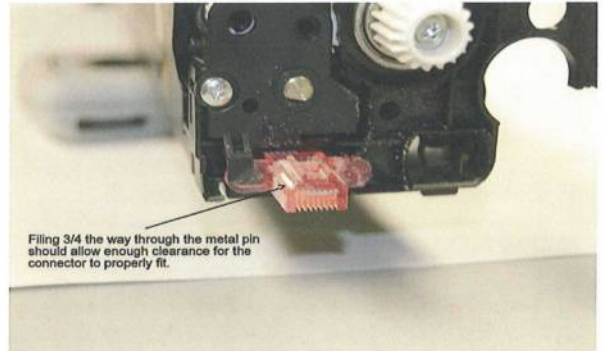


	Black PCU	Colour PCU	To use K PCU as colour...
MP C2000	B224 2042	B224 2042	File corner off connector
MP C2500	B224 2042	B224 2042	" " " "
MP C2500	B224 2042	B224 2042	" " " "
MP C3500	B224 2042	B224 2042	File corner off connector
MP C4500	B224 2042	B224 2042	" " " "
MP C2800	D029 2256	D029 2256	File corner off connector
MP C3300	D029 2256	D029 2256	and swap wires over
MP C4000	D029 2256	D029 2256	File corner off connector
MP C5000	D029 2256	D029 2256	and swap wires over
MP C3001	D089 2250	D029 2256	File corner off connector
MP C3501	D089 2250	D029 2256	and swap wires over
			Also mod base plate
MP C4501	D089 2250	D029 2256	File corner off connector
MP C5501	D089 2250	D029 2256	and swap wires over
MP C4502	D144 2250	D029 2256	
MP C5502	D144 2250	D029 2256	Also mod base plate

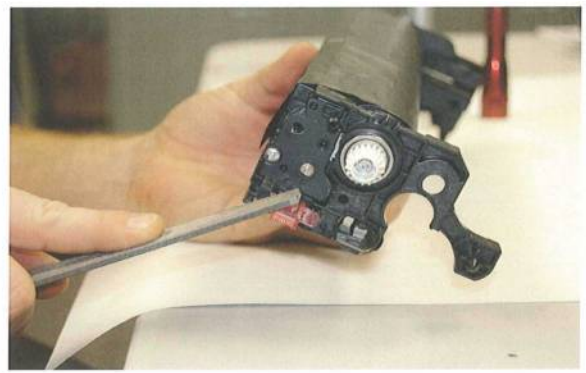

If the drum doesn't smoothly slide into place, don't force it. Forcing it could damage/push out the connector on the machine side. Just file the connector down a little more until it fits properly.

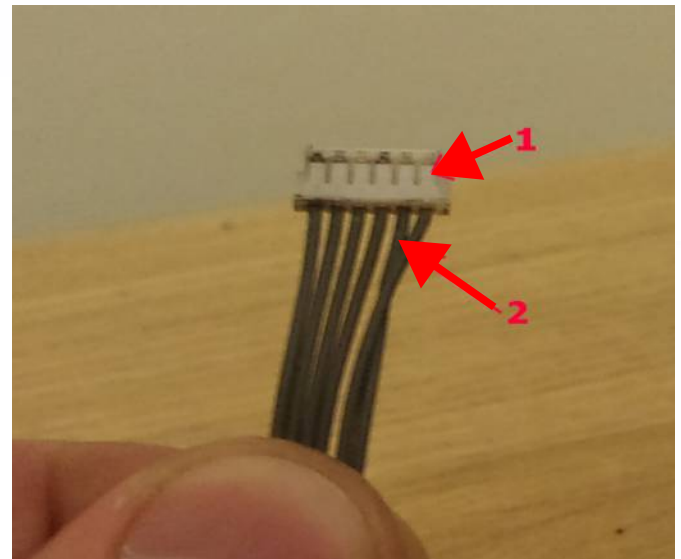

Lift plastic tab (1) with knife edge or small tip screwdriver and pull wire out. Now swap it with the wire in the second position (2) using the same method. Next, crimp the plastic tab back down with needle nose pliers. Gently tug on the wire to make sure they are secure.



Cut the pin at the rear of the base plate so it is flush with the top of the guide rail.